Provisioning using HTTPS protocol (KX-TGP series)

No. 02-010

Sep 10, 2015 Ver.1.0

Panasonic Corporation

1

© Panasonic Corporation 2015

Abstract about this document

This document describe about provisioning using HTTPS protocol.

Revision history

Date	Version	Revision	Firmware version
Sep. 10, 2015	Ver. 1.0	Initial Release	All versions

Behavior



WEB User Interface setting

Panasonic	3	
KX-TGP600	Status Network System	VoIP Telephone Maintenance
Web Port Close	Provisio	ning Maintenance
Maintenance	Provisioning Maintenance	
Provisioning Maintenance	Standard File URL	4
Upgrade Firmware	Product File URL	
Import Wallpaper	Master File URL	
Export Logging File Reset to Defaults	Cyclic Auto Resync	⊙Yes ◉ No
Restart	Resync Interval	10080 minutes [1-40320]
	Time Resync	[00:00-23:59, NULL: Disable]
	Header Value for Resync Event	check-sync 5
		Save

- 1. Enter the IP address into a PC's Web Browser.
 - (Refer to final page "How to access Web User Interface")
- 2. Login as "Administrator".
- 3. Move to [Maintenance] [Provisioning Maintenance] screen.
- 4. Enter the file path in "Master File URL"
- 5. Click [Save].

Configuration file setting

PCC Standard Format File # DO NOT CHANGE THIS LINE

HTTP_SSL_VERIFY="2" CFG_ROOT_CERTIFICATE_PATH="xxxxxx/Certificate.crt CFG_STANDARD_FILE_PATH="https://xxxxxx/Config{MAC}.cfg"

- 1. Please make a configuration file that sets the above settings.
- 2. Apply Configuration file into TGP600.

Meaning of HTTP_SSL_VERIFY

Value Format	Integer
Description	Specifies whether to enable the verification of the root certificate
Value Range	 0 (No verification of root certificate) 1 (Simple verification of root certificate) 2 (Precise verification of root certificate) Note If set to "0", the verification of the root certificate is disabled. If set to "1", the verification of the root certificate is enabled. In this case, the validity of the certificate's date, certificate's chain, and the confirmation of the root certificate will be verified. If set to "2", precise certificate verification is enabled. In this case, the validity of the server name will be verified in addition to the items verified when "1" is set.
Default Value	0

How to access Web user interface

- 1. Confirm the IP address of KX-TGP600.
 - 1-1 : Handset [MENU] (center of joystick) \rightarrow select [System Settings] \rightarrow
 - \rightarrow select [Status] \rightarrow select [IPv4 Settings] \rightarrow select [IP Address].
 - 1-2 : Confirm the IP address displayed on LCD.
- 2. Embedded Web.
 - 2-1 : Handset [MENU] → [Setting Handset] →[Other Option] → [Embedded Web] →select [On]
- 3. Access the Web user interface.
 - 3-1 : Open your Web browser.
 - 3-2 : Enter your KX-TGP600 URL to Web browser (http://your KX-TGP600 IP address) .
 - 3-3 : Enter Authentication ID and password and click "OK". (Default :ID="admin", password="adminpass")